


Reference Specifications

MPN35 ABSOLUTE BISS/SSI Ver. 6.0 Page 1/12 MPN35 Absolute encoder (Through shaft) 1.1 Introduction MPN35 is an ultra-thin, micro-compact, mechanical flexible connection design MPN35-E with high precision absolute optical encoder, capable of outputting 24Bits of single-turn position information. The product is compact, highly integrated and easy to install, which can solve the installation problems in limited space and with low requirements for the shaft installation. 1.2 Feature: • External diameter Ø35mm (Mounting flange Ø44.2mm), Thickness 16.2mm, Hollow shaft up to Ø8mm; · Concentric shaft ring locking structure, · Adopt non-contact photoelectric reflective principle; • Interface: BiSS_C or SSI; MPN35-J Accuracy: ±80"; · Resolution up to 24Bits, 1.3 Application: Servo motor, robot and other industrial automations. 1.4 Connection: Radial socket (8P SM08B-GHS-TB). Radial cable (length 1000mm).

- 1.5 Protection IP50
- 1.6 Weight: about 70g

2. Model guide

Model form (filled required parameters in the box as following)

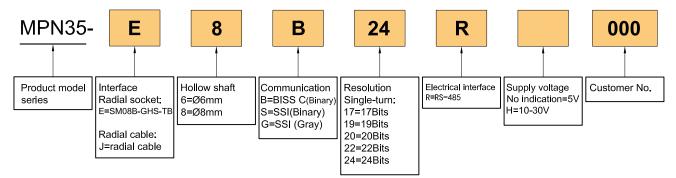

Ver. 6.0 Page 2/12

No: 01100024

 \gg

3. Basic specification

3.1 Resolution

	Single-turn(ST)	
17Bits	2 ¹⁷ (0~+131071)	
19Bits	2 ¹⁹ (0~+524287)	Under 24Bits as standard,
20Bits	2 ²⁰ (0~+1048575)	expandable up to Max 32Bits
22Bits	2 ²² (0~+4194303)	
24Bits	2 ²⁴ (0~+16777215)	

3.2 Parameter

Name	Parameter	Remark
Scanning principle	Photoelectric	
Accuracy	±80"	
Response speed	Normal action: 6000min ⁻¹	
RMS position signal noise	±2 @18 Bits/r	
Communication	BiSS_C (Binary)	Pls refer to BiSS_C standards
	SSI (Binary / Gray code)	Pls refer to SSI standards
Communication clock frequency	≤10 MHz(BiSS) or ≤5 MHz(SSI)	
Max resolution	24 Bits expandable up to Max 32 Bits	For frame infomation,please refer to P9 & P10 (data frammes)
Starting time	Typical value: 13 ms	
Absolute position sampling period	≤75 ns	
Allowable speed	≤32200 r/min	Restricted by mechanical speed limit
Electrical connection	Radial socket & Radial cable	
Cable	Twisted-paired cable	Pls refer to page 6、7
Cable length	200mm - 10000mm	
Internal single-turn position update rate	15000kHz	Access rate is limited by communication frequency
Internal multi-turn position update rate	11.5kHz	
Temperature alarm limit value	-20°C~95°C	

3.3 Mechanical specification

Name	Parameter	Remark
Mechanical Connection	Mechanical Connection Ring locking with shaft, flange fixing	
Diameter of shaft	Ø6mm、Ø8mm (through)	Pls refer to page 5 for
Shaft material Stainless steel dimensions		dimensions
Starting Torque	less than 5×10 ⁻³ N·m	
Inertia Moment	less than 1.5×10 ⁻⁶ kg⋅m²	
Shaft load	Radial 15N; Axial 5N	
Allowed speed	≤6000 rpm	
Shell material	Aluminium alloy	
Weight	about 70g	

3.4 Environmental specification

Name	Parameter
Environmental temperature	Operating: −20~95°C
	Storage: −25~+95°C
Environmental humidity	Operating and storage: $35{\sim}85\%$ RH (Noncondensing)
Vibration	Amplitude 0.75mm ,5 \sim 55HZ,2h for X,Y,Z direction individually
Shock	490m/s ² 11ms three times for X,Y,Z direction individually
Protection	IP50

 \gg

Ver. 6.0 Page 3/12

Ver. 6.0 Page 4/12

4. Electrical Characteristics

4.1 Absolute Maximum Ratings

Symbol	Instructions	Minimum	Maximum	Unit
Vcc	Supply Voltage	-0.3	+6.0	V
T _{STG}	Storage Temperature	-20	+95	° C
TJ	Junction Temperature	-	150	° C

4.2 Recommended electrical parameter


Symbol	Instruction	Minimum	Typical value	Maximum	Unit
Vcc	Supply Voltage	4.75	5.0	5.5	V
I _{DD}	Supply Current	-	-	120	mA
f _{BISS} ①	BISS Communication clock frequency	-	-	10	MHz
BISS	SSI Communication clock frequency	-	-	5.0	MHz
Та	Operating temperature		-	+95	° C

1 PIs refer to BiSS_C and SSI standards.

Ver. 6.0 Page 5/12

No: 01100024

5. Basic dimensions

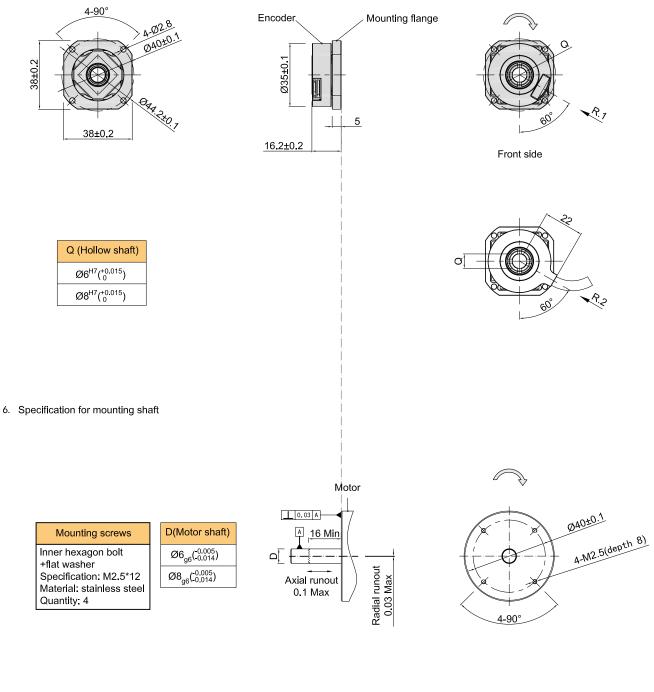

Unit: mm

$$\bigcirc \bigcirc \bigcirc$$

= Shaft rotation direction of the signal output

R. 1 = Radial socket(8P SM08B-GHS-TB)

R. 2 = Radial cable (standard length 1000)


Ver. 6.0 Page 6/12

7. Interface Definition

7.1 Function and definition of socket pin (Radial socket)

Pin No.	Signal		Function	Twisted-paired cable	
	BISS_C ST	SSI ST			
Pin 1	Up	Up	Power positive		
Pin 2	Un	Un	Power negative		
Pin 3	SL-	DATA-	Data signal		
Pin 4	SL+	DATA+	Data signal		
Pin 5	MA-	CLOCK-	Clock signal		
Pin 6	MA+	CLOCK+	Clock signal		
Pin 7	-	-	-		
Pin 8	-	-	-		

7.2 Pin Assignment

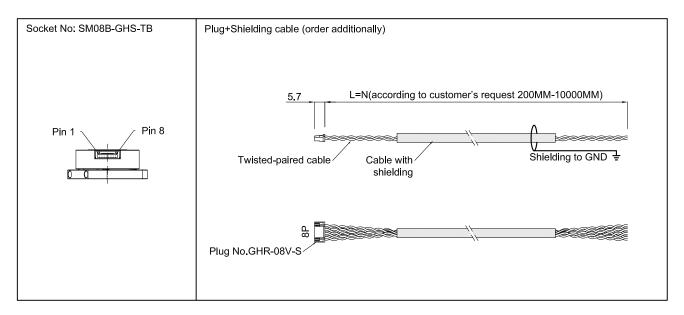

Unit: mm


www.shhxgd.com fang@shhxgd.con Tel: 86-21-54613487 We reserve the final interpretation right of this specifications, subject to change without notice .

Ver. 6.0 Page 7/12

7.3 Function and color definition (Radial cable)

Wire Color	Signal		Function	Twisted-paired cable
	BISS_C ST	SSI ST		
Red	Up	Up	Power positive	
Black	Un	Un	Power negative	
White	SL-	DATA-	Data signal	
White/black	SL+	DATA+	Data signal	
Green	MA-	CLOCK-	Clock signal	
Green/black	MA+	CLOCK+	Clock signal	

7.4 Radial cable schematic

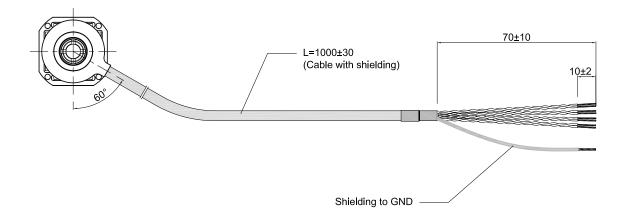

Unit: mm

Ver. 6.0 Page 8/12

No: 01100024

7.5 Electrical Connection

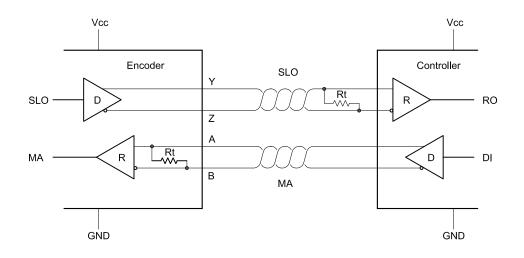


Figure 1: Point-to-point configuration

Note: Both the MA and SLQ lines are differential twisted-paired cable transmission, compatible with RS422. The terminal resistor of the MA transmission line has been integrated inside the encoder.


HENGXIANG /// Encoder


MPN35 ABSOLUTE BISS/SSI

Ver. 6.0 Page 9/12

No: 01100024

7.6 BiSS_C Communication

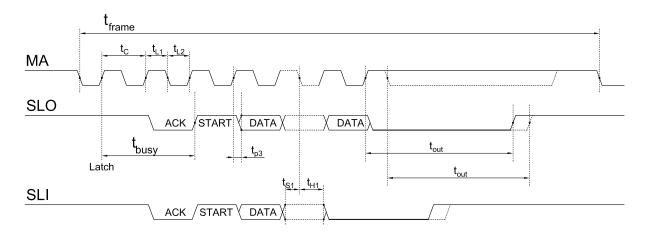



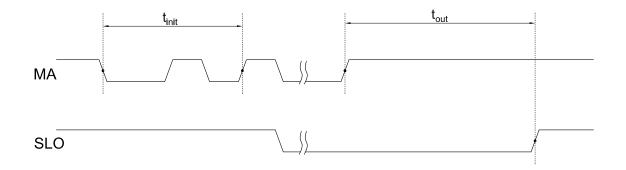


Figure 3: BiSS-C (SSI) Slave Timeout Sequence

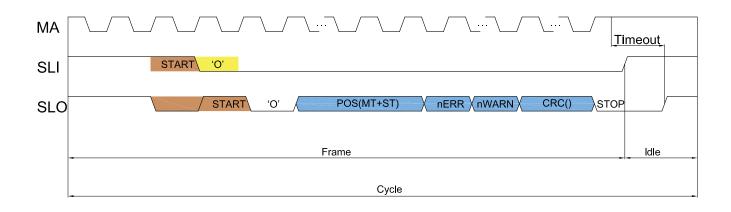


Figure 4: BiSS Frame Structure

HENGXIANG /// Encoder

MPN35 ABSOLUTE BISS/SSI

Ver. 6.0 Page 10/12

No: 01100024

7.7 SSI Communication


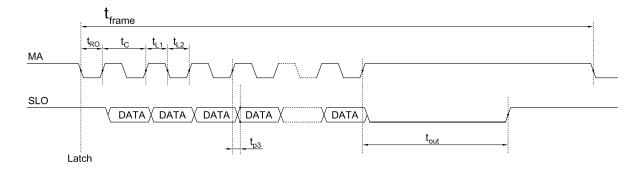


Figure 5: SSI Timing



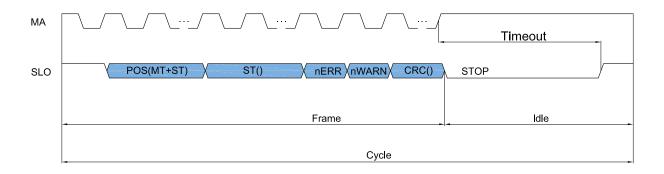

The frame is composed of frame structure and data to be transmitted. The sequence of data transmission first is MSB, error bit and alarm bit are low effective, cyclic redundancy check transmitted inverted. The specific data composition is shown in the below table:

	Bits No.	Data	Instructions
[5	55:32]	MT[23:0]	Recording the accumulative number of the encoder running after power on, including directivity
[3	31:8]	ST[23:0]	Current data of absolute location
[7	7]	nERR	Error output, active low
[6	6]	nWARN	Warning output, active low
[5	5:0]	CRC[5:0]	Check bit CRC polynomial of 0x43 with a starting value of 0 (output at flip level)

HENGXIANG /// Encoder

8. Installation Steps

First Step

a. Put the encoder(2) directly on the motor shaft and gently push it to the motor.

MPN35 ABSOLUTE BISS/SSI

b. Tighten four M2.5*12 bolts (3) at the same time, but do not tighten them too tightly.When the shaft sleeve and the motor shaft are tightened, fasten the four bolts.


Note: Please refer to page 5 for the fit tolerances of the encoder bushing and the motor shaft.


Second Step

Fix the spanner (A) on the slot of the encoder shaft sleeve, tighten the lock nut with the spanner (B). (the recommended tightening force is 7-10 N.m), and then tighten the four M2.5*12 lock bolts (3).

Note:

To avoid loosening of the lock nut during use, which can cause displacement and slippage between the encoder shaft and motor shaft, it is necessary to apply thread adhesive to the threaded surface of the lock nut during installation and then tighten it.

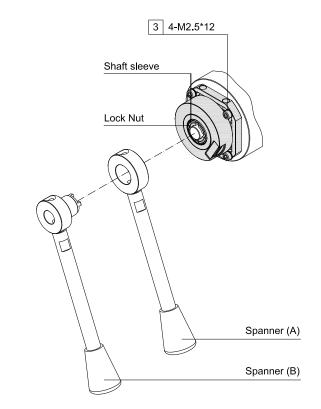

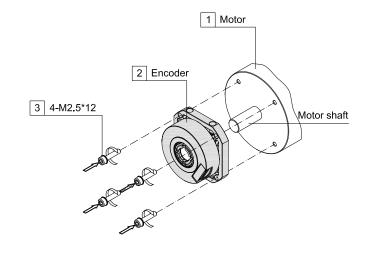

Ver. 6.0 Page 11/12



Ver. 6.0 Page 12/12

No: 01100024

9. Caution

9.1 Caution for operation

- The working temperature shall not exceed the storage temperature.
- The working humidity shall not exceed the storage humidity.
- Do not use where the temperature changes dramatically and have fog.
- Do not close to corrosive and flammable gas.
- Keep away from dust,salt and metal powder.
- · Keep away from places where you will use water, oil, or medicine.
- Undue vibration and shock will impact the encoder.

9.2 Caution for Installation

- Electrical components should not be subjected to excessive pressure, etc.,
- and electrostatic assessment of the installation environment should be conducted.
- Do not close the cable of the motor power to the encoder.
- The FG wire of the motor and mechanical device should be grounded.
- The shielding wire must be effectively grounded since the shielding is not connected to the encoder.

9.3 Caution for wiring

- Use the encoder under the specified supply voltage. Please note that the supply voltage range may
 drop due to the wiring length.
- Do not put the encoder wiring and other power lines through the same duct, and do not use them by bundling in parallel.
- Please use twisted pair wires for the signal and power wires of encoder.
- · Please do not apply excessive force to the cable of encoder, or it will may be damaged.



2023.7.2